


# XTL SERIES AND XT30/XT50

## Quick Reference

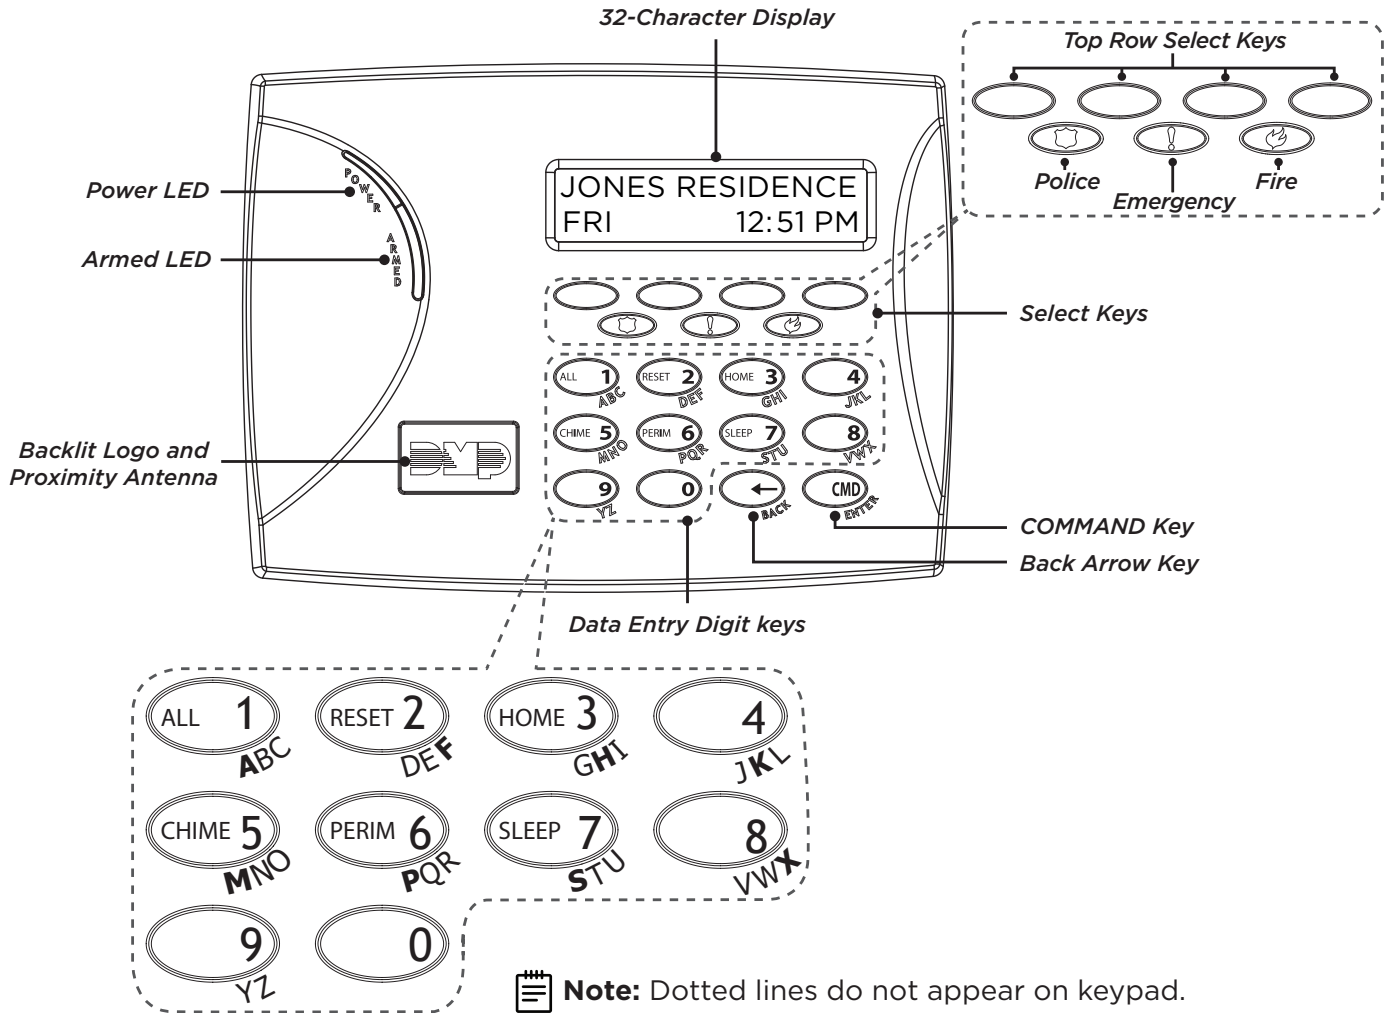


Keypad Key	Representative Letter	Arming System Operation
Press Key 1	A	Arm <b>All</b> or <b>A</b> way for Home/Sleep/Away systems
Press Key 2	F	Sensor ( <b>F</b> ire) Reset on all systems
Press Key 3	H	Arm <b>H</b> ome for Home/Sleep/Away systems
Press Key 4	K	Check-in Report on all systems
Press Key 5	M	<b>M</b> onitor (Chime) on all systems
Press Key 6	P	Arm <b>P</b> erimeter for All/Perimeter systems
Press Key 7	S	Arm <b>S</b> leep for Home/Sleep/Away systems
Press Key 8	X	Easy <b>E</b> xit for Home/Sleep/Away systems

## HOW TO ARM DIFFERENT AREAS

Checking Zone status before <b>ARMING</b>	If one or more zones are not in a normal condition, the keypad displays <b>SYSTEM NOT READY</b> . Pressing any Select Key during this display shows the zone names that are <b>NOT READY</b> .
<b>ARM System</b>	<ol style="list-style-type: none"> <li>1. Enter your user code. The keypad displays <b>ALL PERIM or HOME SLEEP AWAY</b></li> <li>2. Select <b>HOME</b> or <b>PERIM</b> to arm the Perimeter only</li> <li>3. Select <b>SLEEP</b> to arm the Perimeter and Interior (except bedroom areas).</li> <li>4. Select <b>ALL</b> or <b>AWAY</b> to arm the Perimeter, Interior, and Bedroom.</li> <li>5. If a problem exists on any zones, the zone name and problem display followed by: <b>OKAY BYPASS STOP</b>. <ol style="list-style-type: none"> <li>a. Select <b>OKAY</b> to force arm the zone(s) before arming.</li> <li>b. Select <b>BYPASS</b> to bypass the zone(s) before arming.</li> <li>c. Select <b>STOP</b> to stop the system from arming. Correct and return to step 1.</li> </ol> </li> <li>6. The keypad next displays <b>EXIT: ## INSTNT</b> and begins to count down the number of seconds remaining for you to exit.</li> <li>7. You can select <b>INSTNT</b> while <b>EXIT: ## INSTNT</b> displays to immediately arm all zones and remove entry/exit delay.</li> </ol>
<b>DISARM All Areas</b>	Enter your user code to disarm the system.
<b>DISARM All Areas (while in alarm)</b>	<ol style="list-style-type: none"> <li>1. Enter your user code</li> <li>2. Keypad displays <b>CANCEL VERIFY</b></li> <li>3. If alarm is false, press Select key under <b>CANCEL</b> to cancel alarm.</li> <li>4. If the alarm is valid or you are unsure of the cause of alarm, press the Select key under <b>VERIFY</b> to alert the Monitoring Center that you verify the alarm they just received.</li> </ol>
Quick Arm <b>HOME</b> or <b>PERIM</b>	Press Key 3 for 2 seconds to arm the perimeter.
Quick Arm <b>AWAY</b> or <b>ALL</b>	Press Key 1 for 2 seconds.
Quick Arm <b>SLEEP</b>	Press Key 7 for 2 seconds to arm the perimeter and interior areas and leave the bedroom area off.
Turn Chime (Monitor) on/off	Press Key 5 Chime (Monitor)
Sensor Reset	Press Key 2 for 2 seconds, then enter your user code if required to reset the system.

Your keypad may be configured to manually send a Panic, Emergency, or Fire alarm to the central station:

<b>Police Alarm</b>	Press and hold the two Select keys adjacent to the Police button for 2 seconds, until a beep from the keypad is heard.
<b>Emergency Alarm</b>	Press and hold the two Select keys adjacent to the Emergency button for 2 seconds, until a beep from the keypad is heard.
<b>Fire Alarm</b>	Press and hold the two Select keys adjacent to the Fire button for 2 seconds, until a beep from the keypad is heard.

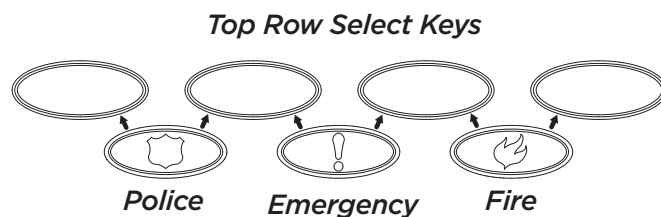

Designed, engineered, and manufactured in Springfield, Missouri using U.S. and global components.  
 © 2020 Digital Monitoring Products, Inc.  
 LT-1023 20101

**INTRUSION • FIRE • ACCESS • NETWORKS**  
 2500 North Partnership Boulevard  
 Springfield, Missouri 65803-8877  
 800.641.4282 | DMP.com